

## Pocket WiFi 601HW



### Contact

**Phone Number:**  
**03-6812-1288**  
(weekday 10am ~ 6pm)  
**e-mail:**  
**info@luckywifi.net**

\*Customer is responsible for the charge for a telephone call.  
\*Before contact us, please read "trouble shooting" on the reverse side.

**Only for Domestic**

### Return Address


**Terralink Inc.**  
Meisho MG building 8F, 1-47-1 Higashi Ikebukuro,  
Toshima-ku, Tokyo, 170-0013, Japan

### Extend Rental Period

- You can apply online with Rental Extension to extend your rental period.
- We apologize for not being able to comply with your extension request over the phone.



### Parts and Functions

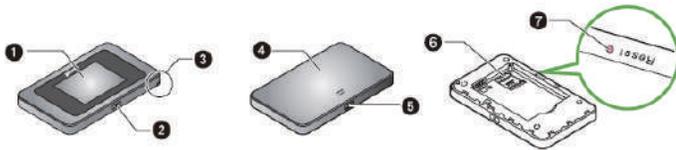

- 1 Display**
- 2 Power switch**
  - Turn Display on / off
- 3 Notch**
  - Use notch to remove Battery cover.
- 4 Battery cover**
- 5 External Device Port**
  - Connect USB cable and AC charger (sold separately)
- 6 USIM card slot**
- 7 Reset Button**
  - Press reset button for over approximately five seconds to reset settings to defaults.

### Power on / off

#### Power on

- 1 Press and hold the power switch more than two seconds.**
- 2 Flick Display up / down**  
Clock is shown on lock screen. Shown date and time are obtained from connected network. Date and time can not be changed by users.




#### Power off

- 1 Press and hold the power switch more than two seconds.**


### Charging

#### Micro USB cable

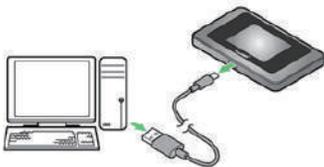


Insert Micro USB cable (Micro USB plug) into External Device Port and PC.

#### AC charger

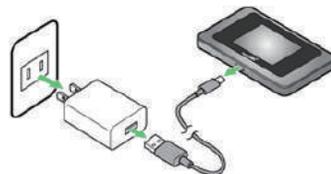

Insert USB cable into External Device Port, and USB connector of AC charger, power plug of AC charger connect to AC outlet.

### Home screen

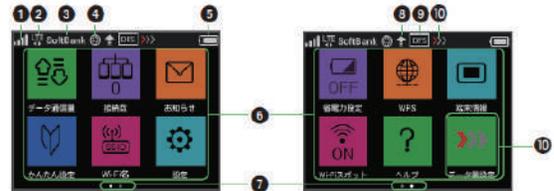

- 1 Levels of mobile networks connected**  
mobile network  
  - strong
  - weak
  - no service
  - Roaming
- 2 Network name**
- 3 Network operator name**
- 4 Status of Internet connected**
  - Connected
  - Not connected
- 5 Battery**
  - Battery charged
  - Battery low
  - Battery almost empty
  - Charging
- 6 Touch menu Icons**  
Touch menu icons for various functions
- 7 Page indicator**  
Indicators which Home screen page you are in
- 8 Software update**
  - Notification
  - Downloading
- 9 DFS checking**
- 10 Limitation**
  - Advance notice of communication speed slow down
  - Start of communication speed slow down
  - Release of communication speed slow down

### SSID and security key

- 1 Tap "Wi-Fi name" on home screen**  
Wi-Fi password and security key appear.  
\*Two Wi-Fi names are set to Wi-Fi router. Select Wi-Fi name according to the connecting device.



### Connecting with USB cable

\*When connecting Wi-Fi router first time, the device driver need to install.

Please operate along the following lines.

- Do not remove Wi-Fi router during installation. May cause failure of installation system shut down or other abnormality.
- If a message come up and shows "restart PC" after installed finished, please restart PC.
- Log in as Administrator.

#### 1 Installing Driver

##### ◇For Windows (Windows 10)

① Power on the PC → Connect Wi-Fi router to the PC

The device driver installs automatically.

\*If instratlin does not begin automatically, click and install "AutRun.exe execution."

##### ◇For Mac

① Power on the PC → Connect Wi-Fi router to the PC

"Pocket Wi-Fi" icon appears on desktop and "Pocket Wi-Fi" folder automatically opens. When double clicking "Pocket Wi-Fi icon," the device driver installs automatically.

#### 2 Insert USB cable (Type-C plug) into External Device Port and USB cable (USB plug) to a computer.

PC recognize Wi-Fi router. PC should recognize Wi-Fi router within a few seconds.


## ◆ Connecting with WLAN (for Windows 10)

\*For security key, please read "SSID and password."

- 1 Activate PC WLAN function
- 2 In task tray click, "Network settings" appears.
- 3 Select Wi-Fi name (601HWa-XXXXXX)→click "Connect"



- 4 Enter password → "NEXT"

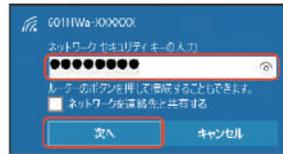

\*WLAN connection counter number on Display increases by one.

- 5 Checking WLAN connected

## ◆ Connecting with WLAN (for Mac)

\*For security key, please read "SSID and password."

- 1 In Apple menu, "System Preferences" →"Network"
- 2 "Wi-Fi" → "Turn Wi-Fi on"
- 3 In "Network Name" pulldown list, select Wi-Fi router's Wi-Fi name (601HWa-XXXXXX)



- 4 Enter password (security key) in "Password" →Click "Remember this network"



\*WLAN connection counter number on Display increases by one.

- 5 Checking WLAN connected.

\*If a message "Can't detect preferred Network" appears, take off the checkmark "Confirm before connecting to new network"

## ◆ Connecting Android Device

\*For security key, please read "SSID and password."

\*Connecting general android device. This section describes setup operations for WPA security settings.

- 1 Activate Android device →In menu "Setting"→"Wi-Fi"
- 2 Tap Wi-Fi router's SSID(601HWa-XXXXXX)



- 3 Enter Security Key in "password" correctly



\*WLAN connection counter number on Display increases by one.

- 4 Checking Wi-Fi LAN connected.

\*Operation steps vary by Android device. About details, refer to Android device user guide.

## ◆ Connecting iPhone/ iPod touch / iPad (iOS10)

\*For security key, please read "SSID and password."

- 1 Activate iOS device "Setting" →"Wi-Fi"
- 2 Tap Wi-Fi name (FS030W\_PXXXX)



- 3 Enter password (security key) →"Join"



\*WLAN connection counter number on Display increases by one.

- 4 Checking Wi-Fi LAN connected.

## ◆ Trouble shooting

\*Please confirm before inquiry.


**[Wi-Fi router is not working, Unable to charge, connect]**  
Please restart the router.

**[Unable to connect Internet Wi-Fi]**  
Please be sure Wi-Fi router function is turned on. Please be sure, you entered password correctly.

If Problem persists, reset Wi-Fi router.

◆How to reset Wi-Fi router

- ①Use notch to lift Battery cover and remove it. Be careful not to hurt your fingernail.
- ②Press and hold with a fine-tipped object for five seconds or more to reset settings to defaults.

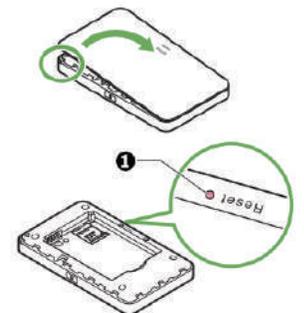

**[Internet connection fails]**

If signal reception is poor or fails, move to where signal is strong, then reconnect. Also please restart the router and connecting devices.

**[Communication speed is slow ]**

When appearing red icon, speed reduction has started. Using TV, radio or microwave oven may cause interference signal reception of Wi-Fi router. Use them apart from Wi-Fi.

**[Wi-Fi router is inoperative]**

Remove Battery →Insert Battery →Power on after a while